# Slim Line Master Mount

## Installation Instructions

-To be installed prior to siding-

**CAUTION:** All electrical connections must be in accordance with state and local codes, ordinances, and the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring and devices, secure the services of a qualified licensed electrician.

### Step 1

Remove the trim ring from the Slim Line Master Mount Assembly. See Figure 1 at right.

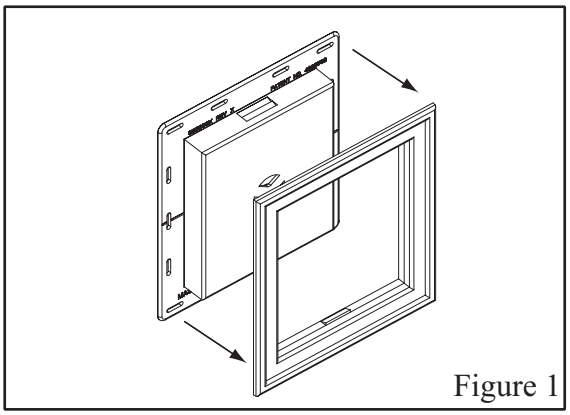

Figure 1

### Step 2

Cut the desired opening in the Slim Line Master Mount by cutting along the patterns provided on the back of the part. See Figure 2 at right.

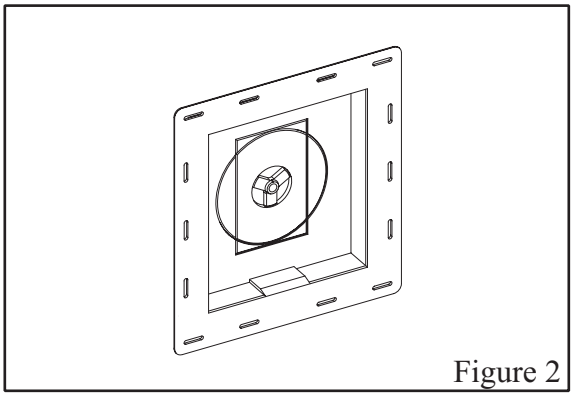

Figure 2

### Step 3

Center the Slim Line Master Mount over the outlet box. Be sure to place tape or sealant between the Slim Line Master Mount and the house. Attach the Slim Line Master Mount securely using an 8d nail or equivalent with a minimum of four attachments. See Figure 3 at right. Note: The sheathing on the illustration at right has been removed for clarity. The outlet box should be in contact with the under side of the Slim Line Master Mount.

*Note: The use of a box extension (supplied by others) may be required by your local or state electrical codes. Alternatively, the box can be repositioned so that it contacts the underside of the Slim Line Master Mount.*

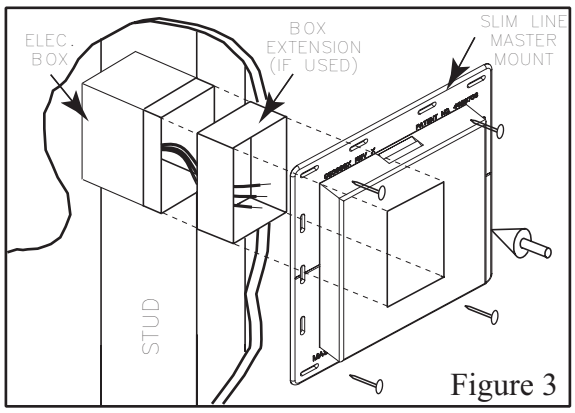


Figure 3

Note: Common sense, caution and care are factors which cannot be built into any product. These conditions must be supplied by the person(s) installing the fixture.

I-0081
PAPC 9560
6/20/02

## Step 4

Cut the siding around the Slim Line Master Mount. Install the siding according to the manufacturer's installation instructions. See Figure 4 at right.

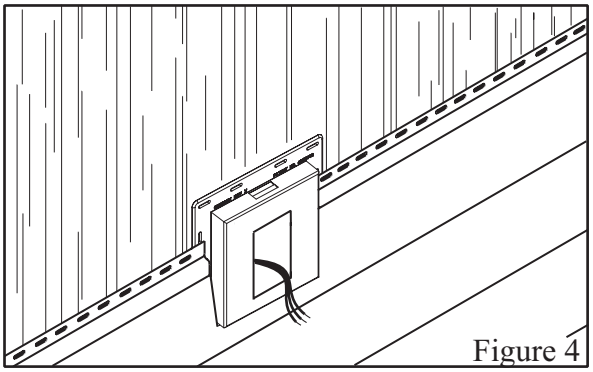

Figure 4

## Step 5

Install the the trim ring by locking it into place See Figure 5 at right.

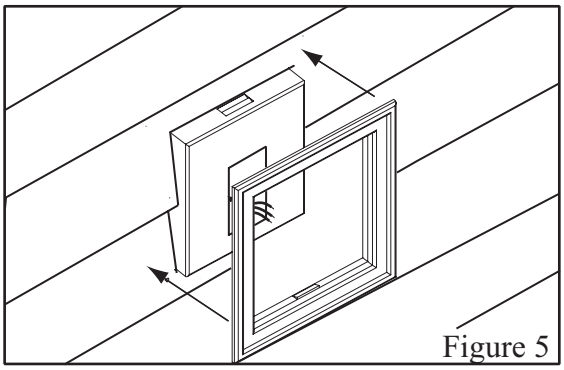

Figure 5

## Step 6

Install the light fixture or electrical device per the manufacturer's installation Instructions. Be sure that all electrical product gaskets have the proper sealant. See Figure 6 at right.

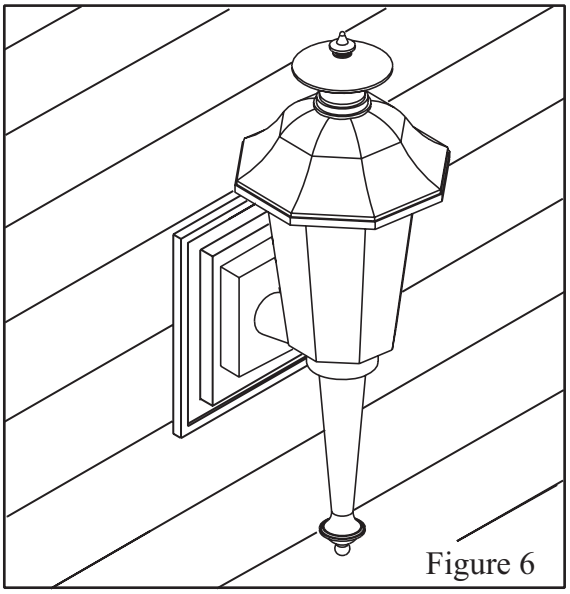

Figure 6